

NOTES:

- 1. THE LAPA CONTROLLER MUST BE EARTHED TO THE CHASSIS VIA THE CONTROLLER FIXING HOLE AS SHOWN.
- 2. TO MEET EMC REQUIREMENTS THE CONTROLLER MUST BE INSTALLED ACCORDING TO THE INSTALLATION REQUIREMENTS SHEET FOR THIS PRODUCT.
- 3. INPUTS REQUIRE `C' CONNECTED TO NEUTRAL AND THE INPUT TO 230Vac WHEN SIGNAL IS PRESENT.
- 4. PLANT INPUTS TO CON2 MUST BE ON THE SAME PHASE AS THE SUPPLY ON CON1.

THIS UNIT IS NOT RATED FOR 415V

- 5. FANS/HEATER OUTPUT SELECTABLE USING MAINTENANCE UNIT.
- 6. THE DEFROST OUTPUT HAS CHANGEOVER CONTACTS. SELECT THE APPROPRIATE OUTPUT FOR THE APPLICATION.



THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP