

1. To ensure that internally fitted suppressors work correctly, connect line voltages to terminals prefixed LN and the corresponding loads to terminals prefixed LD. Terminal 1 (N) must have control supply neutral connected to it.
2. Selection of termination sensor allowed on UAPA from firmware version 0.00.3 and on all versions of UBPA.



JTL SYSTEMS LTD
41 KINGFISHER COURT, HAMBRIDGE RD,
NEWBURY, BERKSHIRE: RG14 5SJ
TEL: 01635 263646 FAX: 01635 263647

ISSUE	DESCRIPTION	APP'D	DATE
3	ADDED HGD AIR ON & NOTE 2	MJK	09/12
2	UPDATED CONNECTIONS	MJK	06/11
4	ADDED UBPA	MJK	05/19

UAPA DISPLAY CABINET CONTROLLER

PROJ.	DRG No: 03788	SHT 1	OF 1	ISS. 4
-------	-------------------------	-----------------	----------------	------------------