

SUPPLY

E L N

E L N 14 13 12 11 10 9 8 7 6 5 4 3 2 1

○ WD

○ TX

JNET BRIDGE

DISPLAY ETH MU

JNet Zone Serial Port

CON3 CON5

15 16 17 18 19 20 21 22 23 24 25 26 27 28

JNet Zone Connections
(See Note)

The NR121 provides RS485 to IP (Ethernet) bridges for 1 or 2 separate Jnet Zones. A 6 Zone Network Controller, therefore, requires 3 NR121 units to facilitate IP bridging for all it's 6 Jnet Zones.

Connections are made via RJ8 connectors marked 'Jnet Zone' and 'Serial Port' as shown they must not be connected to the same Jnet Zone.



ISSUE	DESCRIPTION	APP'D	DATE
2	REMOVED CON4	RMSJ	01/18
1	ORIGINAL ISSUE	MJK	03/17

NR121 JNET BRIDGE CONNECTIONS

PROJ.	DRG No: 04788	SHT 1	OF 1	ISS. 2
-------	-------------------------	-----------------	----------------	------------------