

The HP240 is a spare part which is used to replace the following obsolete JTL product as a spare part:

**HP230**

The HP240 provides full functionality of the former product.

**Electrical**

Rewiring is necessary when replacing the obsolete part with the HP240.

**HP240 OUTPUT CONVERSION**

The output wiring for the heat exchanger enable circuits in terminals 9 & 11 should be moved to terminals 4 & 5. The line voltage being connected to terminal 5 and the load connected to terminal 4.

**OTHER CONNECTIONS**

No other wiring modifications are required.

**Documentation**

Full documentation exists for the HP240 but if this is not available the HP230 documents may be used in conjunction with the information above.

**Controller Setup**

To ensure compatibility when replacing the original part with a HP240, action a factory default setting procedure (Item 9) before setting in the new data.